


db PRÜFTECHNIK
ROTALIGN® touch EX
Pocket guide


Ruggedized EX tablet



sensALIGN® 5 EX sensor and laser

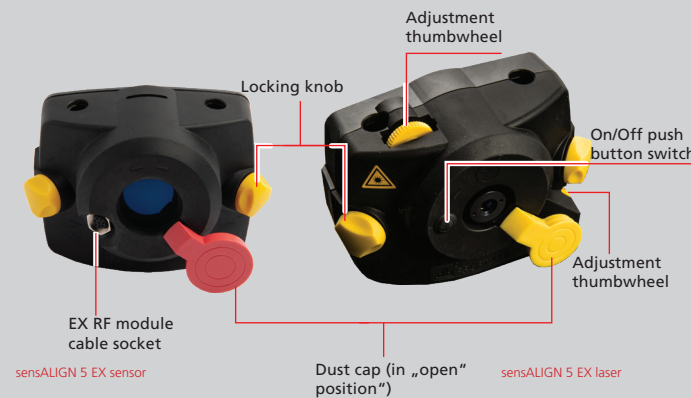




Sign convention

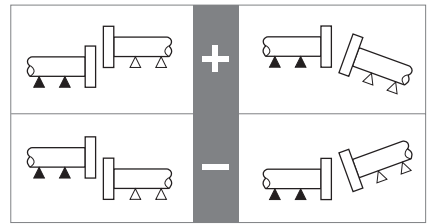


Tolerance






Corrections with Live Move

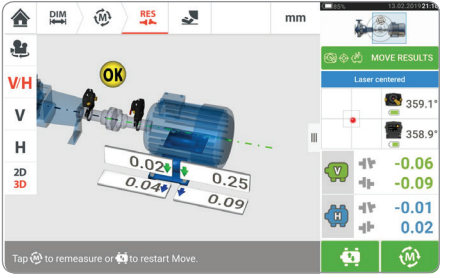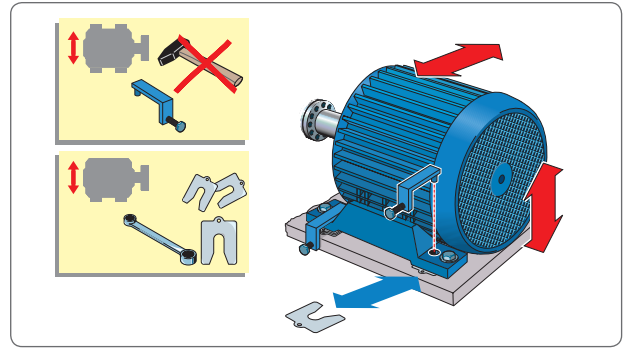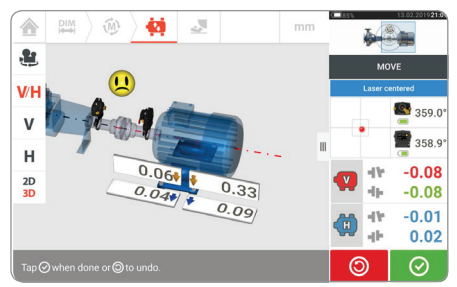



Save measurement file

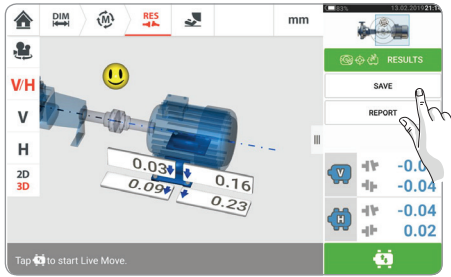

Check soft foot

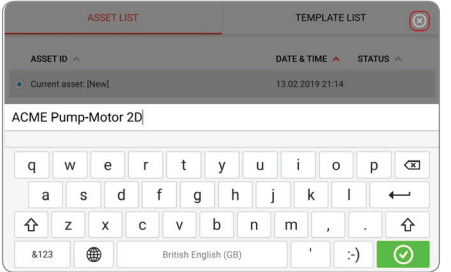
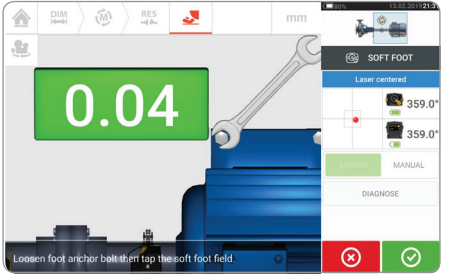
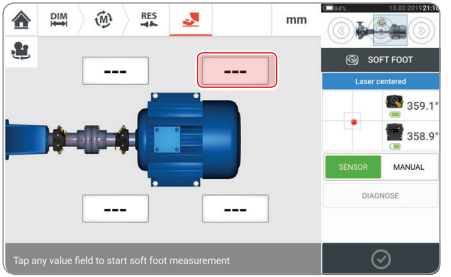


Generate measurement report

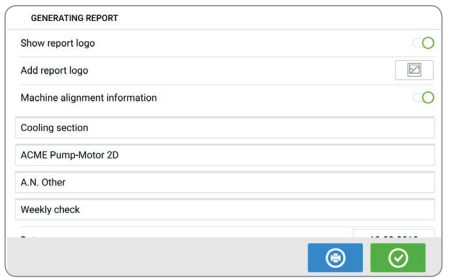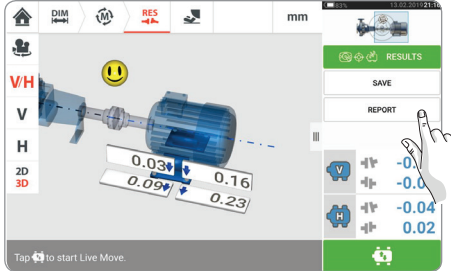

Contents subject to change without further notice, particularly in the interest of further technical development. © Copyright 2018 by Fluke Reliability

1. Mount components

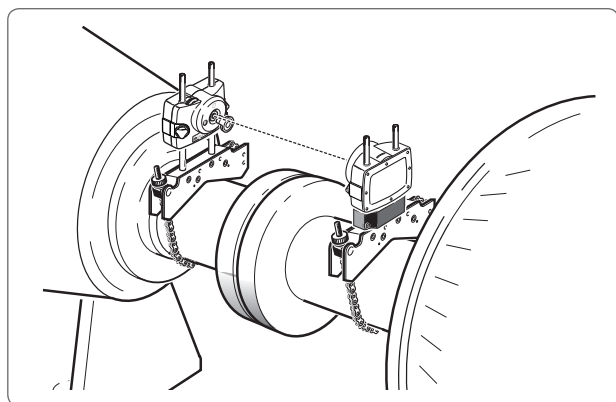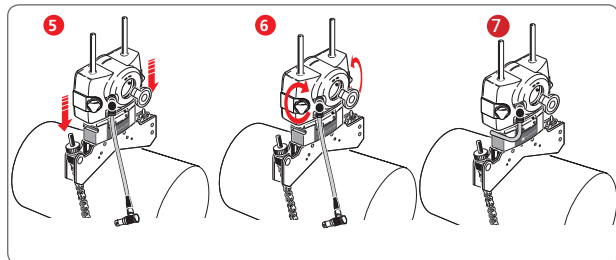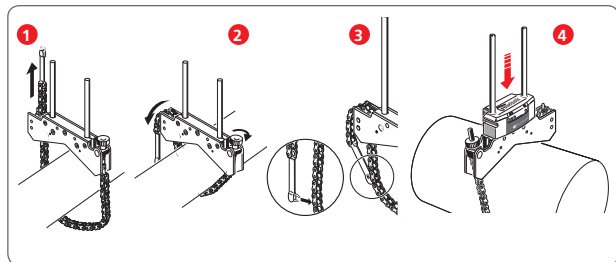

2. Switch components on




Press 3 sec







EX RF module
ON/OFF switch


3. Start application

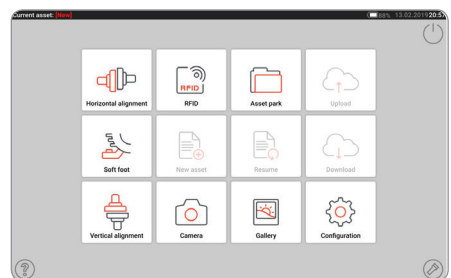


4. Enter dimensions

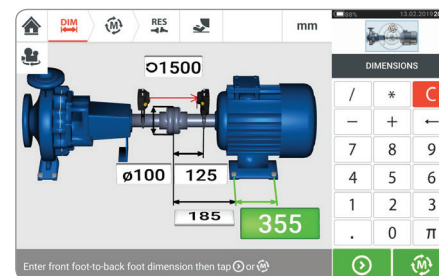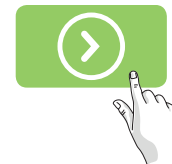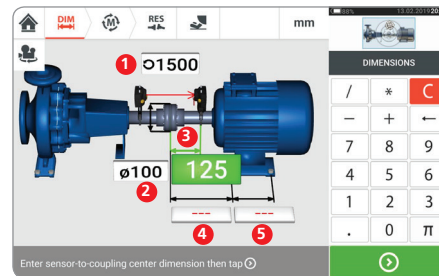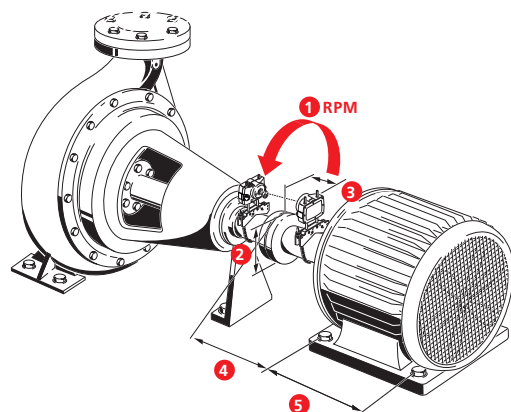

5. Adjust laser and measure

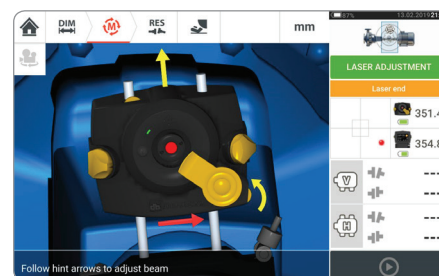

6. View results

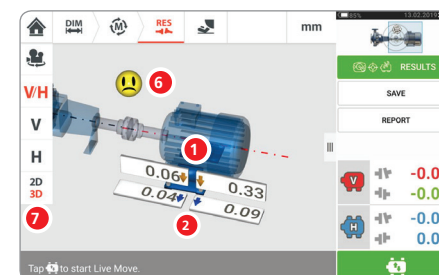

- 1 Vertical feet position
- 2 Horizontal feet position
- 3 Vertical coupling results
- 4 Horizontal coupling results
- 5 Selected results mode
- 6 Alignment condition tolerance icon
- 7 Horizontal and Vertical foot results in 3D / 2D